



185 Multifit External Fascia

"NEW: Woodgrain Embossed Fascia Available Now!"

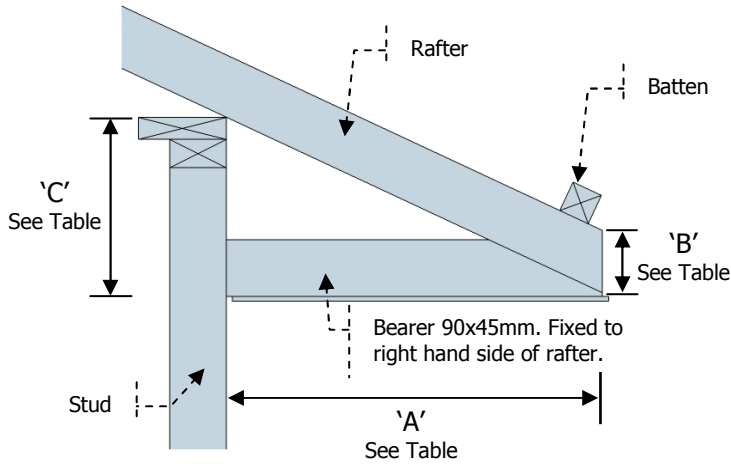

Gable End

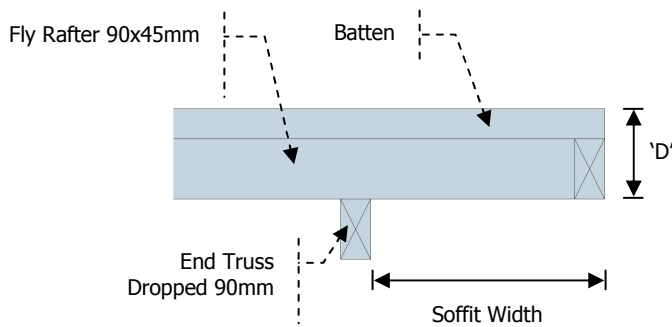

Roof Pitch (Degrees)	Soffit Widths Dimension 'A' (mm)					Fascia Drop Dimension 'B' (mm)
	300	450	600	750	900	
12.5°	112	146	179	212	245	138
15°	125	165	206	246	286	138
17.5°	140	188	235	282	329	140
20°	153	208	263	317	372	140
22.5°	167	229	291	353	415	140
25°	186	256	325	395	465	145
27.5°	200	278	356	434	512	145
30°	214	301	387	474	561	145
35°	250	355	460	565	670	150
40°	284	410	536	662	788	150
45°	323	473	623	773	923	150

All measurements must be checked on site prior to installation.



Important Set Out Notes:

- In all cases gable end will require a packer under rafter to accommodate the various pitches (D).
- Soffit bearer fixed to right hand side of the rafter, looking at the building.
- To ensure birds cannot enter the roof space leave the bottom purlin off until fascia has been installed.
- Based on minimum purlin thickness of 45mm.
- A 10mm soffit clearance has been allowed for.
- 185 Multifit Big Panel Fascia System is suitable for use with longrun roofs with sloping soffits up to 35°.
- Soffit bearers are required on all hip corners.

Important Product Notes:

- Store product securely on site away from incompatible materials and protect from wind and operating machinery.
- Product surface protected with plastic film should be stored under cover, away from u/v light, and film removed immediately after installation.
- It is a requirement of the products warrantee to obtain and thoroughly read a copy of Roofing Industries handling, storage and installation guide. Available from the supplying branch or alternatively from www.roof.co.nz

Steps To Follow:

- Inform precutter that Multifit External Fascia is being used.
- Keep in contact with the authorised installer in your area of progress/when ready for installation.
- Multifit fascia can be installed to other fascia system set outs, only by a few simple steps. Contact your local installer or Roofing Industries.